

Air Filter Fitment - General Guidelines.

INSTALLATION GUIDELINES FOR AN ACDELCO AIR FILTER*



Example of ACDelco Air Filter

1. Always wear appropriate Personal Protective Equipment (eyes, skin, respiratory).
2. Locate the vehicle's air filter. It is usually found in the upper region of the engine bay.
3. Open the lid to the air filter housing using appropriate tools if required. Lift the lid to expose the filter element.
4. Remove the old air filter and wipe down the inside of the housing with a clean cloth.
5. Place new air filter in the lower part of the housing. Ensure the filter is correctly aligned on all sides and that the gasket seals correctly inside the entire rim.
6. Carefully place the lid of the housing over the new air filter. Ensure the lid is correctly aligned and closes flush.
7. Lock the housing using the reverse method of removal.

*Air filter removal and installation can differ greatly between vehicles, so you must refer to your vehicle Manufacturer's service manual for vehicle specific instructions.